


Handling-Shortinstruction for

AC adapter

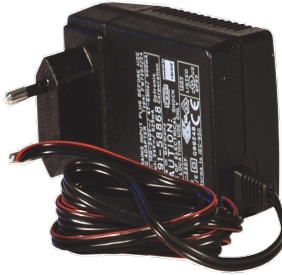


Important instructions:

Please read user instructions before use. Always observe these instructions.

This unit should be only operated at an ambient temperature between 0°C to 45°C up to 95% relative humidity, no condensation.

Mounting the primary plug

The primary plug is interchangeable. This allows a worldwide use. The procedure of changing the plugs is as per the pictures.

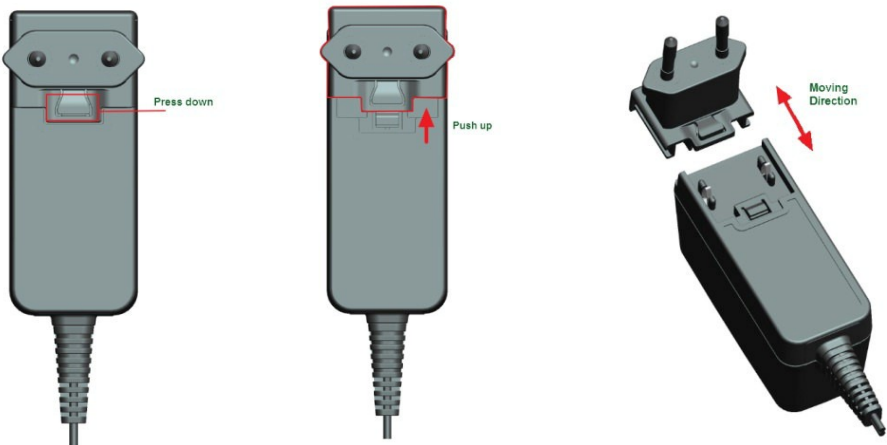

Pinning:

Red wire end ferrule:	+24V DC
Black wire end ferrule:	0V (Ground)

Under the web-address <https://www.process-informatik.de> are product specific documentations or software-driver/-tools available to download.
If you have questions or suggestions about the product, please don't hesitate to contact us.

Process-Informatik Entwicklungsgesellschaft mbH

Im Gewerbegebiet 1

DE-73116 Wäschenbeuren

+49 (0) 7172-92666-0

info@process-informatik.de

<https://www.process-informatik.de>

Copyright by PI - 2026

Menutree Website:


- + Products / docu / downloads
- + Accessories
 - + Connector / Power supply
 - + AC adapter

QR-Code Website:




Please make sure to update your drivers before using our products.

E-Mail notification

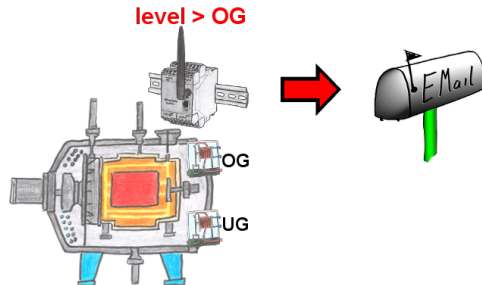

Do you monitor processes and upon reaching a predetermined upper/lower limit, you need a message? Then activate in the device the limit-value-monitoring and you get this message. Furthermore, the device also sends its state and you are always up to date.

Permit requests depending on the ip- and mac-address

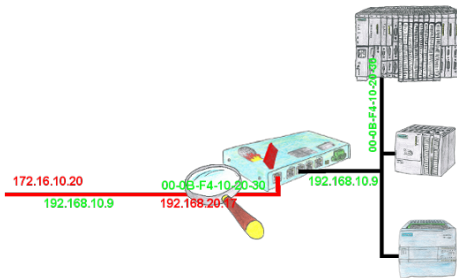

You have in your facility machines from different manufacturers and no one does get access to the controls of the other? No problem, with the S7-firewall you can filter who can ever communicate with the control network and which user with which end users. This is done through the IP address and MAC address.

Serial communication with S5-PLC (CPU-assemblies 15pin)



S5-PLC communication from PC with serial COM-port and your programming package?

PG-Com-cable up to a length of 15m are the appropriate interface-product. Without special accessories, without external supply, plugged on PC and S5 PLC and work immediately. Connection with original Siemens-sliding-locking to S5-PLC, with screw-bolts on the PC. Function with S5-90U to S5-155U. Connection PLC-side 15pin, PC 9pin (adaptation to 25pin at any time possible).

Easiest configuration by included webserver



To configure ALF you dont need additional driver or special cables, you connect your PC via LAN or WLAN with ALF and over the integrated webserver you can configure the needed function.