
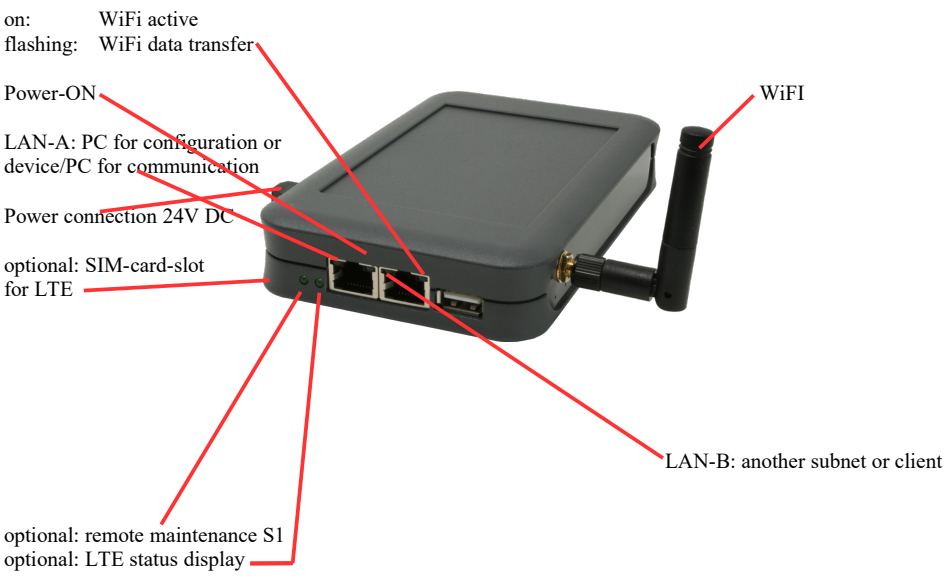


# Handling-Shortinstruction V1.0 for CONNECT-HS-Router + CONNECT-Router industrial WiFi-router


**Connectors:**

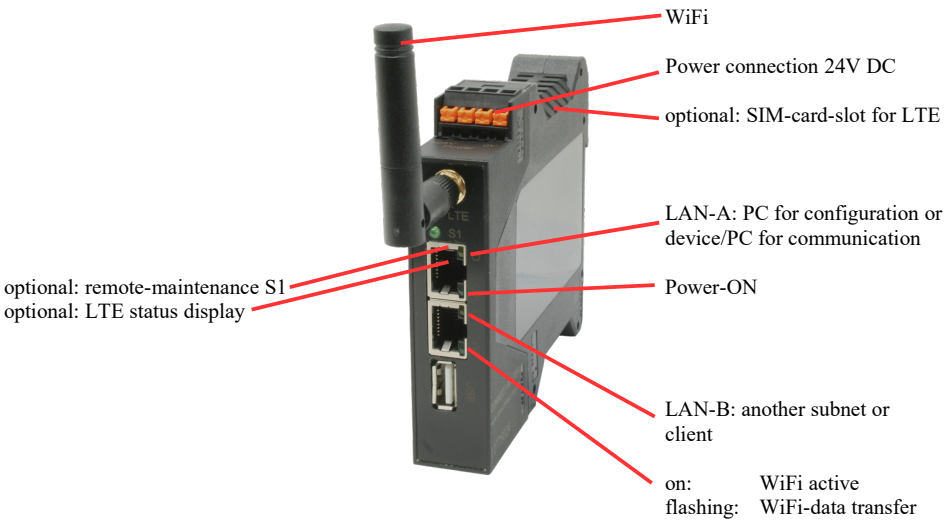

## Power connection :

Voltage: 24 V DC  $\pm$  20%  
power consumption : 1,2W

## Assignment of voltage plug :

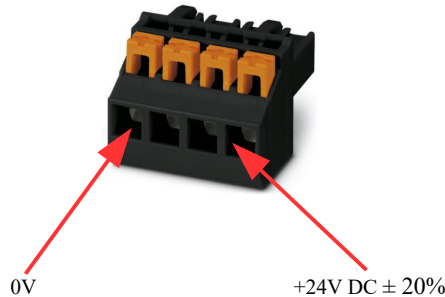

## Initial start-up:

- CONNECT-Router creates a WLAN network with an SSID „CONNECT WiFi“ with active DHCP master (laptop is automatically assigned an IP address)
- Connect laptop to this WiFi network and open with browser webserver with IP: <http://192.168.2.1>

or

- Connect the PC to the LAN port using a LAN cable
- PC must be in the 192.168.2.xxx subnet

## Starting page:

### commissioning

Before you can start to use the device you will have to set up some basic settings. Afterwards your device will be immediately ready for the communication.  
On the page "configuration" you can change these as well as some further settings at any time.

#### basic configuration

In the first step you have to specify how you want to use your device.  
Specifying the name is optional.

device name:

operation mode: ☒ Bridge ☐ Router

next

## Basic configuration:

Assign a name to the device for identification

2 operating modes are possible with the CONNECT-Router :

- Bridge Multiple interfaces connected to a common network
- Router Separation between LAN and WAN (Internet) network

For operation mode Bridge:

**LAN configuration**

In the last step you have to configure how your device should be connected with the local network.

interfaces: ☒ LAN-A  
☒ LAN-B  
☒ WLAN

**IP settings**

IP configuration: ☐ DHCP  
☒ manually

DHCP server: ☒ enable

IP address:

subnet mask:

**WLAN settings**

search:

mode:  ▼

SSID:

security type:  ▼

channel:  ▼

### LAN configuration:

Determine the interfaces that should be bridged

### IP settings:

- IP configuration: DHCP (parameters come from a DHCP master on the network)  
Manual (IP address + subnet mask fields must contain valid values)
- DHCP server: Device is a DHCP server on the selected interfaces
- IP address: IP address of the device
- subnet mask: Subnet mask of the device

### WLAN settings:

- Search: Searches for accessible WiFi networks and lists them. By clicking on an entry, the selected WiFi network is used for connection
- Modus: Access-Point (AP) [the CONNECT-Router opens its own WiFi]  
Client [the CONNECT-Router connects to an existing WiFi network]
- SSID: Name of the connected or created network
- Sicherheitsstufe: Open (no encryption )  
WEP (either 5 or 13 ASCII/10 or 26 hexadecimal characters )  
WPA (8-64 ASCII characters)  
WPA2 (8-64 ASCII characters)  
WPA/WPA2 8-64 ASCII characters (Independent automatic selection whether WPA or WPA2 )
- Kanal: Selection of the connection channel

for operation mode Router:

**WAN configuration**

Next you have to configure how your device should be connected with the internet / WAN.

WAN interface: LAN-A ▾

**IP settings**

IP configuration: ☐ DHCP  
☒ manually

IP address:

subnet mask:

gateway address:

back

next

### WAN interface:

#### IP settings:

- IP configuration:

- IP address:

- subnet mask:

- gateway address:

Set the WAN interface from LAN-A, LAN-B oder WLAN

DHCP (Parameters come from a DHCP master on the network)

Manuell (fields IP Address + Subnet Mask + Gateway Address must contain valid values)

IP address of the device

Subnet mask of the device

Gateway address of the device

### LAN configuration:

Determine the interfaces that should be connected to the local network

**LAN configuration**

In the last step you have to configure how your device should be connected with the local network.

interfaces: ☒ LAN-B  
☒ WLAN

**IP settings**

IP configuration: ☐ DHCP  
☒ manually

DHCP server: ☒ enable

IP address:

subnet mask:

**WLAN settings**

search: start search

mode: Access Point (AP) ▾

SSID: CONNECT WIFI

security type: open ▾

channel: auto channel ▾

back

save

### IP settings:

- IP configuration: DHCP (Parameters come from a DHCP master on the network)  
Manuell (fields IP address + subnet mask must contain valid values)
- DHCP-Server: Device is a DHCP server on the selected interfaces
- IP address: IP address of the device
- subnet mask: Subnet mask of the device

### WLAN settings:

- Search: Searches for accessible WiFi networks and lists them; by clicking on an entry, the selected WiFi network is used for connection
- Modus: Access-Point (AP) [the CONNECT-Router opens its own WiFi]  
Client [the CONNECT-Router connects to an existing WiFi network]
- SSID: Name of the connected or created network
- Sicherheitsstufe: Open (no encryption )  
WEP (either 5 or 13 ASCII/10 or 26 hexadecimal characters)  
WPA (8-64 ASCII characters)  
WPA2 (8-64 ASCII characters)  
WPA/WPA2 8-64 ASCII characters (Independent automatic selection whether WPA or WPA2)
- Kanal: Selection of the connection channel

By “Save” the selected configuration is adopted. The device is ready for use in the specified operating mode after a short waiting period (maximum 10s).

You need the following operating modes for the following situations :

Situation	Operating mode	WLAN mode	Particularities
With a laptop around the S5/7 PLC + CONNECT-Router	Bridge	Access-Point	PLC via S5/7 LAN on LAN-A port, additional LAN participants on LAN-B port
Bring S5/7-PLC or LAN-participants into the existing WiFi network	Bridge	Client	PLC via S5/7-LAN / LAN-participant on LAN-A port, additional LAN-participant on LAN-B port
Create a separate subnet for connected devices	Router	Access-Point	LAN-A port to the company network, LAN-B port + WLAN to the machine network (Don't forget routes in the company network)
Extend LAN route Attention: 2 devices are required	Bridge	1. device Access-Point 2. device Client	One device as AP and the second as client

After selecting the configuration, save it in the device and after a short initialization time (max. 10s) the devices are ready for operation.

You can find out more about the operating modes in the device manual on the CONNECT-Router product page.

Under the web-address <https://www.process-informatik.de> are product specific documentations or software-driver/-tools available to download.  
If you have questions or suggestions about the product, please don't hesitate to contact us.

Process-Informatik Entwicklungsgesellschaft mbH

Im Gewerbegebiet 1

DE-73116 Wäschenbeuren

+49 (0) 7172-92666-0

[info@process-informatik.de](mailto:info@process-informatik.de)

<https://www.process-informatik.de>

Copyright by PI 2024 - 2025

### **Menutree Website:**

- + Products / docu / downloads
- + Hardware
  - + Router 3G / WLAN/WIFI
  - + CONNECT-Router-devices
  - + CONNECT-HS-Router




### **QR-Code Website:**



Please make sure to update your drivers before using our products.

## Profinet-Member-Analysis

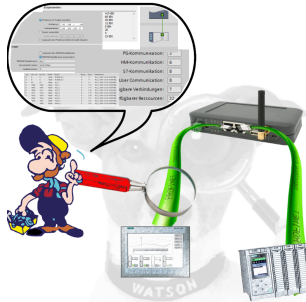


Exact analysis of your Profinet members.

Addresses, configurations and other data can be recorded directly.


See immediately possible conflicts due to the configuration.

## Remote maintenance of your S7-PLC-device via LAN / Internet

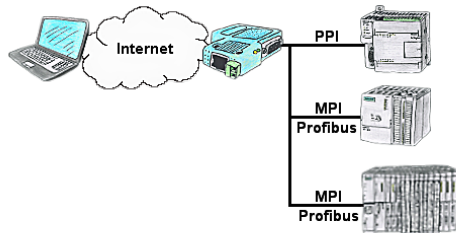

You have access to a on-site network and your PLC-device has no LAN-connection? No problem, plug the S7-LAN on the PLC-device and you will have immediate access to the PLC from afar.

## Interface-products for S7-PLC

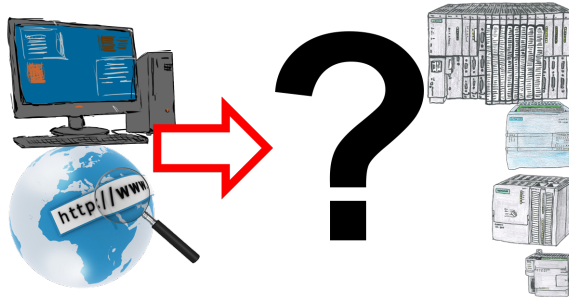


Communication with S7-PLC, just how and with what?

Data communication with S7-PLC from PC or other devices, which interface fits on/to my controller. All questions you don't have to worry about. With "Programming adapter S7" you get the right interface for PPI, MPI and Profibus.

Select the interface of your PC or device (serial via COM-port, USB, Ethernet (network), WIFI) and you will be shown the possible products.

Which one you use then is up to you.

## Data backup S5-PLC on SD-card via dig. IO

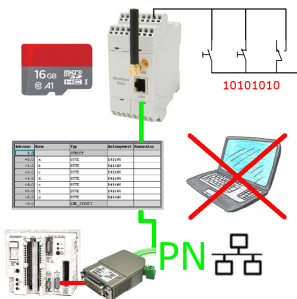

Via digital input triggered DB-backup/-restore without additional PC via PG-socket and Ethernet to SD-card