
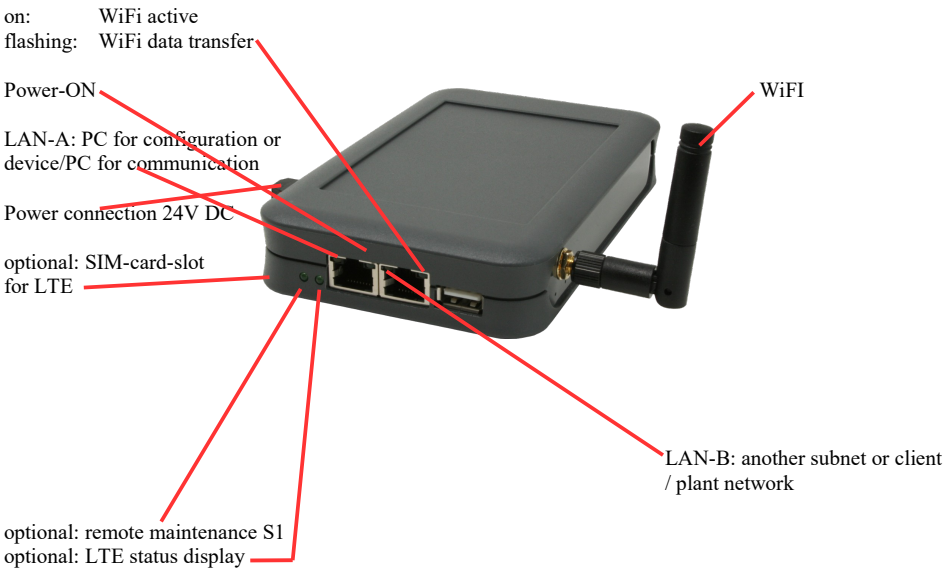


# Handling-Shortinstruction V1.0 for CONNECT protocol converter


## Connectors:

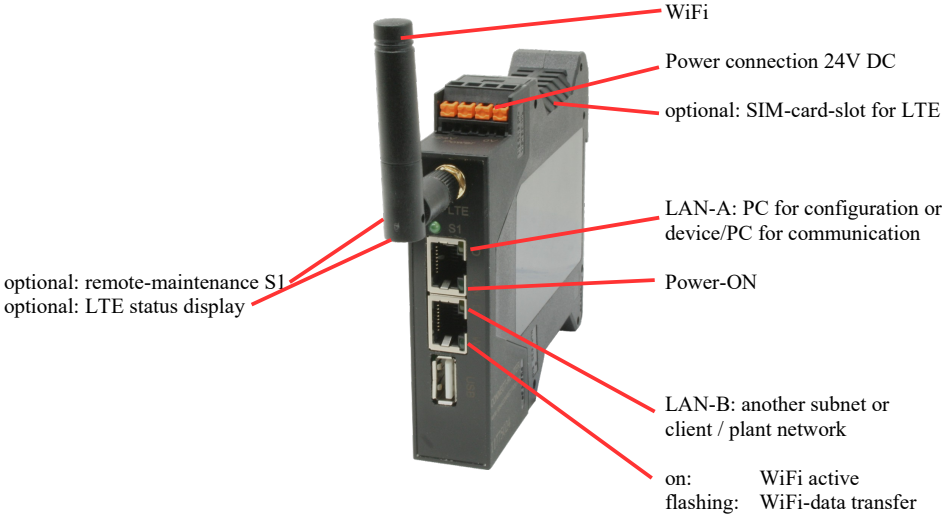

## Power connection :

Voltage: 24 V DC  $\pm$  20%  
power consumption : 1,2W

## Assignment of voltage plug :

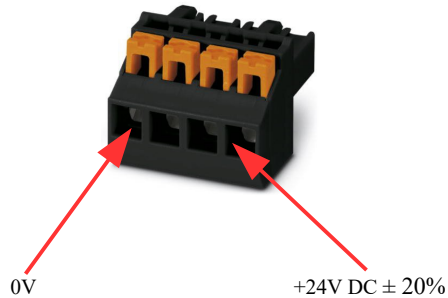

## Initial start-up:

- CONNECT protocol converter creates a WLAN network with an SSID „CONNECT WiFi“ with active DHCP master (laptop is automatically assigned an IP address)
- Connect laptop to this WiFi network and open with browser webserver with IP: <http://192.168.2.1>

or

- Connect the PC to the LAN port using a LAN cable
- PC must be in the 192.168.2.xxx subnet

## Starting page:

**commissioning**

Before you can start to use the device you will have to set up some basic settings. Afterwards your device will be immediately ready for the communication.  
On the page "configuration" you can change these as well as some further settings at any time.

**basic configuration**

In the first step you have the possibility to specify a name for your device.

device name:

## Basic configuration:

Assign a name to the device for identification

Connection to company network:

**internet configuration**

Next you have to configure how your device should establish a connection to the internet.

router interface:

**IP settings**

IP configuration:  DHCP  
 manually

IP address:

subnet mask:

gateway address:

Determine the interface to which the company network is connected

**IP settings:**

- IP-configuration: DHCP (Parameters come from a DHCP master on the network)  
Manuell (IP address + subnet mask fields must contain valid values)
- IP address: IP address of the device
- subnet mask: Subnet mask of the device
- gateway address: Gateway address of the device

Connection to plant network:

**peripheral configuration**

In the last step you have to configure how your device should be connected with the plant network, where the H1 participants are connected to.

interface:

**IP settings**

IP configuration:  DHCP  
 manually

DHCP server:  enable

IP address:

subnet mask:

Determine the interface to which the plant network is connected

**IP settings:**

- IP-configuration: DHCP (Parameters come from a DHCP master on the network)  
Manuell (IP address + subnet mask fields must contain valid values)
- DHCP server: Device is on this interface itself a DHCP server, parameterization of the server in the menu configuration when first configuration is finished.
- IP address: IP address of the device (optional for H1-nets)
- subnet mask: Subnet mask of the device (optional for H1-nets)


After the configured data has been adopted, the device automatically restarts and uses the entered data.

### Defining the S7-H1 assignment:

After the device has booted up again after the initial configuration, the S7-H1 implementation must be parameterized.

To do this, click in the webserver on the button  (couplings) and define the possible connections you need.

Each connection, whether FETCH or WRITE, must be created separately. Confirm each entry with the "+"- symbol and finally, click "save" to apply all entries to the configuration:

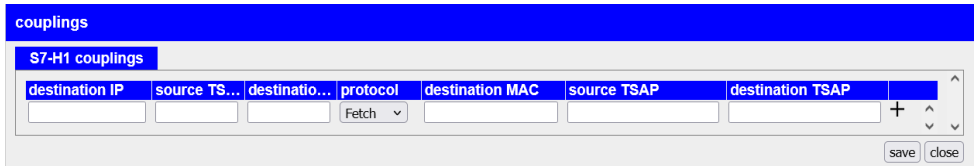

destination IP	source TS...	destinatio...	protocol	destination MAC	source TSAP	destination TSAP	
			Fetch				+

There are two basic options for the S7-H1 implementation:

- a separate free IP-address for each connection in the network (requires many free IP-addresses for many connections)

destination IP: IP address of this connection (must not already be used in the network)  
source TSAP: source TSAP of this connection, may also be empty/not required  
destination TSAP: destination TSAP of this connection, may also be empty/not required  
protocol: Fetch or Write (read or write connection)  
destination MAC: MAC address of the participant to whom this connection is to be established  
format: AA:BB:CC:DD:EE:FF  
source TSAP: source TSAP of this connection as defined in the CP of the S5-PLC  
destination TSAP: destination TSAP of this connection as defined in the CP of the S5-PLC

TSAP generally enter as a HEX number, e.g. 0102 or 4831 without additions !!!

- a common IP-address for each connection and differentiation by source/destination TSAP (IP-address can be that of the device or a separate free IP-address in the network)

destination IP: IP address of this connection (may also be empty => device IP-address is used)  
source TSAP: source TSAP of this connection, may also be empty/not required  
destination TSAP: target TSAP of this connection, required to distinguish between connections  
protocol: Fetch or Write (read or write connection)  
destination MAC: MAC address of the participant to whom this connection is to be established  
Format: AA:BB:CC:DD:EE:FF  
source TSAP: source TSAP of this connection as defined in the CP of the S5-PLC  
destination TSAP: destination TSAP of this connection as defined in the CP of the S5-PLC

TSAP generally enter as a HEX number, e.g. 0102 or 4831 without additions !!!

Once these connections have been created and saved, the S7-H1 implementation can be used. Changes to the basic configuration can be made in the webinterface in the "Configuration" menu.

More information about the configuration can be found in the device manual on the product page of the Protocol converter S7-TCPIP <=> H1 (ISO)

Under the web-address <https://www.process-informatik.de> are product specific documentations or software-driver/-tools available to download.  
If you have questions or suggestions about the product, please don't hesitate to contact us.

Process-Informatik Entwicklungsgesellschaft mbH

Im Gewerbegebiet 1

DE-73116 Wäschenbeuren

+49 (0) 7172-92666-0

[info@process-informatik.de](mailto:info@process-informatik.de)

<https://www.process-informatik.de>

Copyright by PI 2023 - 2026

**Menutree Website:**

+ Products / docu / downloads

+ Hardware

+ Remote maintenance

+ S5

+ Internet

+ CONNECT devices


+ Protocol converter S7-TCPIP <=> ISO(H1)

**QR-Code Website:**




Please make sure to update your drivers before using our products.

## 24V-supply from the PLC

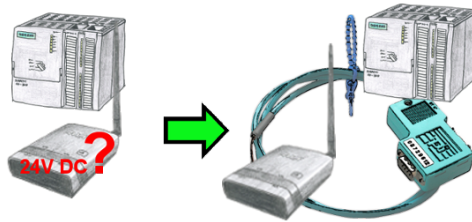


You want to install your ALF directly in the switch-board and would like to use the 24V of the existing S7-PLC? No problem, connect the open ended side of the Kabelbrücke to the 24V port on your ALF and the bus-side on the MPI- or Profibus of this PLC. Even the ALF is supplied above this PLC.

## Data backup S7-PLC PN-port on FTP-server via dig. IO

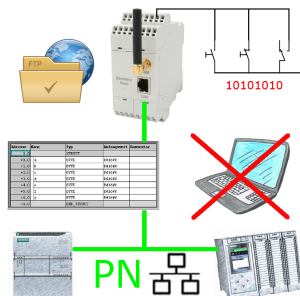

Via digital input triggered DB-backup/-restore without additional PC via PN-port to FTP-server


## WinTELEPROF-software = software-PG-TELE

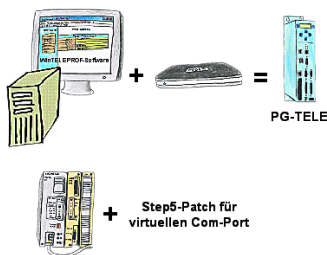

You're using the devices of the Tele-Network-family and don't want to have a device standing on the table? No problem. Install the WinTELEPROF-software on your PC and after link connection access to your Step5/7-programming software (also Siemens) via a virtual Com-Port.

At Step5 the Step5-software is going to be patched, then working with the virtual Com-Port will be also possible.

## Sending ASCII-data to a PC

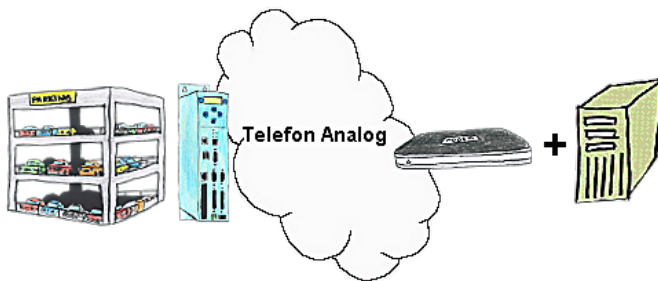

Your car park or control sends the configuration / capacity utilisation to a PC with a modem, so that the data can be used for further processing.

## Variable-chart without Step7-programming package



You would like to give your customer the opportunity to read current numbers of the manufacturing Online, without installing a visualisation or even the STEP7-package? Then a S7-LAN with the option Status Variable" is needed, and your customer can take a look at these password protected data on a site of the integrated webservice.

## Profinet-monitoring/-diagnosis inclusive alarm-messages



Detect intrusions and anomalies on your Profinet.  
Early detection of malfunction and failures and malfunctions.  
Easy installation, plug and play double socket.